


PRODUCT:	Cortex - Analytics
ITEM CODE:	

Introduction


This guide has been formulated to assist with the initial setup of cortex analytics.

1. Right click and login to NVR.
2. Navigate to Settings > Analytics and choose tripwire on desired camera by double clicking the relevant "X".

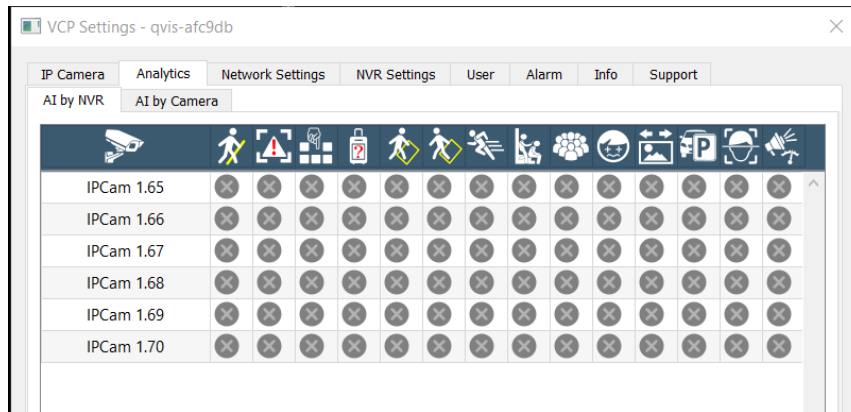


3. Click "Enable" to start. (you can also change the analytics type)

Configure Analytics

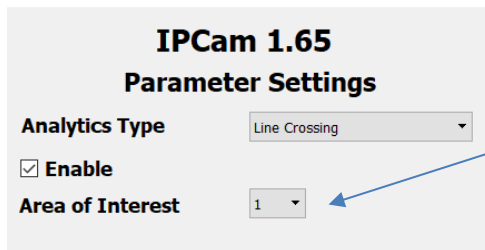

Make up to 4 rules per channel

4. Choose target and direction of trigger:

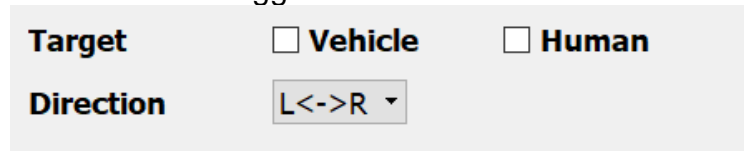

PureTech Electrical Products Ltd. Telephone: +44 (0)2392 488300	Page 1 of 2 Issued By: Technical Dept
Approved By: Technical Manager	Date: 09/02/2024

5. Using the left mouse button draw the rule on the camera image:



6. Dictate what to happen once rule is triggered.

Alarm Settings

<input type="checkbox"/> Log Event	<input type="checkbox"/> Audible Alarm	<input type="checkbox"/> Push Notify
Video Alarm	Relay	Email Settings
No ▼	None ▼	No ▼

7. Once rule is set, alerts will show on the Cortex Go app.

PureTech Electrical Products Ltd. Telephone: +44 (0)2392 488300	Page 2 of 2 Issued By: Technical Dept
Approved By: Technical Manager	Date: 09/02/2024