


<b>PRODUCT:</b>	<b>Falcon – Area Intrusion</b>
<b>ITEM CODE:</b>	

## Introduction

This guide has been formulated to assist with Viper Area Intrusion.

## Initial Device Set-Up

1. Click on settings on the bottom left.

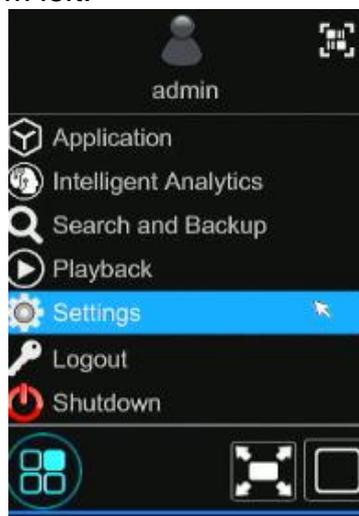


2. Select People/Vehicle Detection under AI Event, then make sure Area Intrusion is selected.




Qvis Lighting & Security Ltd. Telephone: +44 (0)2393 870050	Page 1 of 3 Issued By: Technical Dept
Approved By:	Date: 12/03/2024


3. Using left mouse button, draw the area on the camera image.

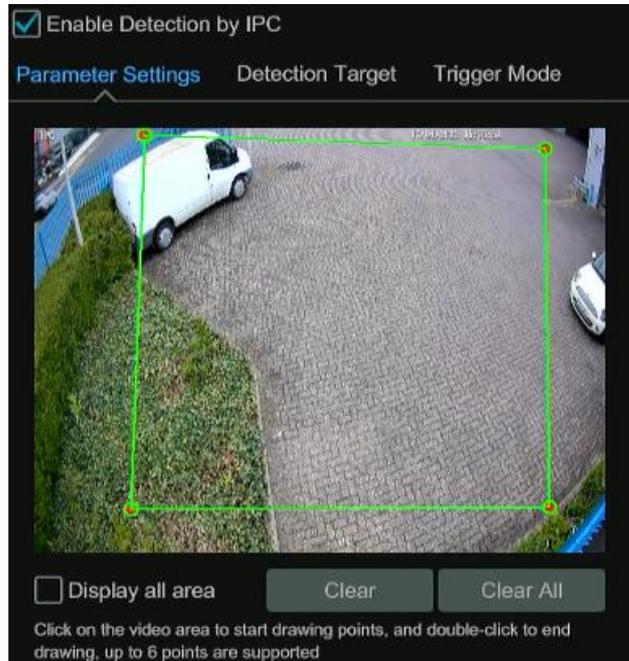

4. Once the area is drawn, you can schedule the rule, set a duration and add up to 3 more intrusion rules on the same camera.

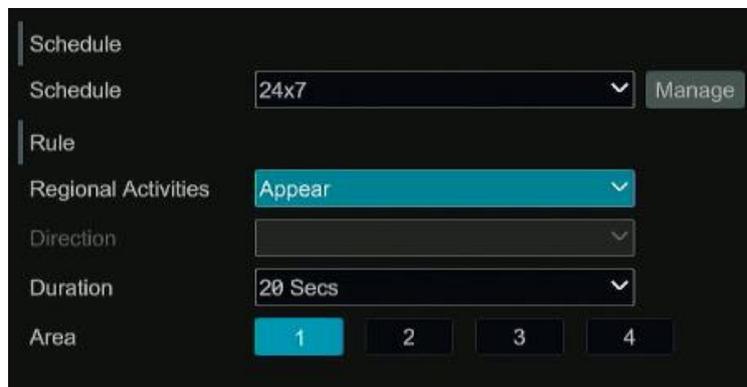

5. Under detection target, you can specify what the line crossing is looking for.

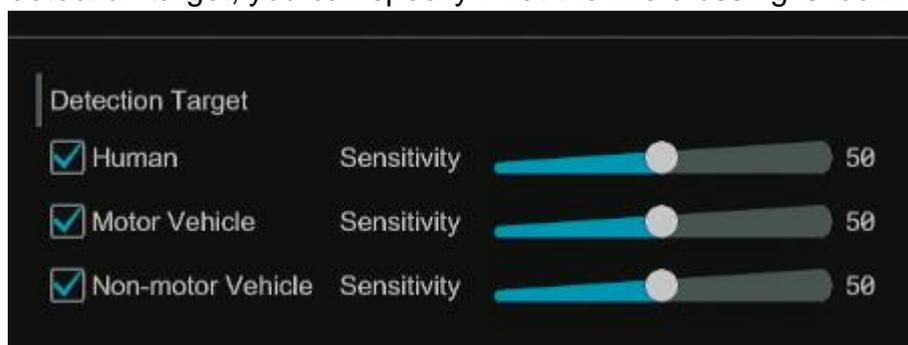

6. Trigger mode, will stipulate what happens once the line crossing is triggered.



(Push message indicates a pop will appear on mobile phone app)