


PRODUCT:	Cortex - Analytics
ITEM CODE:	

Introduction

This guide has been formulated to assist with the initial setup of cortex analytics.

1. Right click and login to NVR.
2. Navigate to Settings > Analytics and choose tripwire on desired camera by double clicking the relevant "X".

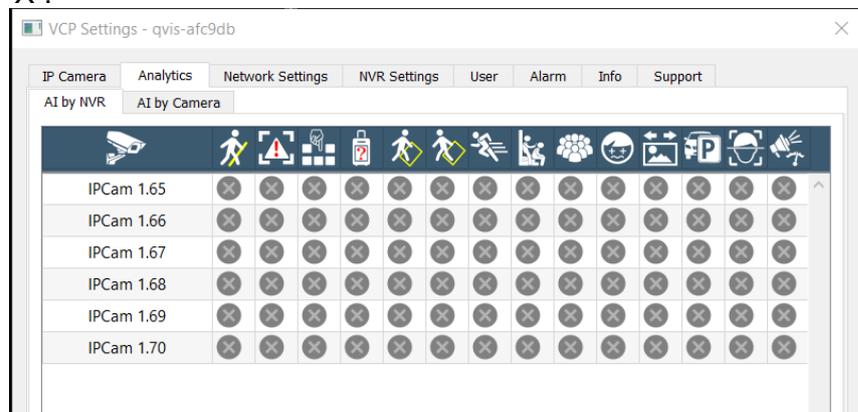

3. Click "Enable" to start. (you can also change the analytics type)

Configure Analytics

IPCam 1.65
Parameter Settings

Analytics Type: Line Crossing

Enable

Area of Interest: 1

Make up to 4 rules per channel

4. Choose target and direction of trigger:

Target Vehicle Human

Direction L<->R

Qvis Lighting & Security Ltd. Telephone: +44 (0)2393 870050	Page 1 of 2 Issued By: Technical Dept
Approved By:	Date:29/05/2024

5. Using the left mouse button draw the rule on the camera image:



6. Dictate what to happen once rule is triggered.

Alarm Settings

Log Event
 Audible Alarm
 Push Notify

Video Alarm **Relay** **Email Settings**

No ▼ None ▼ No ▼

7. Once rule is set, alerts will show on the Cortex Go app.

Qvis Lighting & Security Ltd. Telephone: +44 (0)2393 870050	Page 2 of 2 Issued By: Technical Dept
Approved By:	Date:29/05/2024