## Adding Device NVMS2

1. Open NVMS2 (Monitor Client)



Login (if prompted)

Username: admin

Password: 123456

2. Select Resource Management, then Add



Add, Edit or Delete Device	Device	Setting	Area Setting Channel Group Setting						
Device Type ^		Add	Delete	Select Tra	ansfer Server				
Encoding Device (Online/Total n		Edit	Device N	Type	Channel A				
Intelligent Analysis Server (Onlin		Luit	Device IV	туре					
Storage Server (Online/Total nur									
Media Transfer Server (Online/Te									
Alarm Server (Online/Total numl									

3. Manually add and click in the IP address field



4. Select Serial number from drop down



5. Enter NAT number from the Network settings of the recorder you want to add

A			Add Encoding Device				
	Quickly Add	Manually Add	Initiatively Repo	rt			
	IP Address/IP Ran	ige/Domain Nam	Protocol	Port			
	Serial No. 🗸 🗸	NABABABBABA	BABA	Standard Device			

6. Add the username and password of the recorder

Add Encoding Device										
vely Repor	t									
lo./URL	Protocol	Port	User Name	Password	Test	Delete				
	Standard Device		admin	•••••						

## The status will then appear online

Add	Delete	Select Area	Select Tra	ansfer Server	Select St	torage Serve	r Batch U	Jpgrade for	IPC Selec	ct SOP			Sea	arch		Q
	Edit	Device N	Туре	Channel	Alarm In	Alarm Ou	IP Addres	Port	Select Area	Select Tra	Select St.	Online St	Model	Version	HDD Status	Alarm
		Device N	Standard	3	5	1	N641A04		default ar	Transfer S	Storage S	. Online	IPER-NV	1.4.4.4357		6

7. You can view the added recorder/cameras by selecting live view, and dragging each camera to an available box

